


AUTO CURRENT A

D.C. CURRENT SENSOR WITH AUX. INPUT


INSTALLATION INSTRUCTIONS

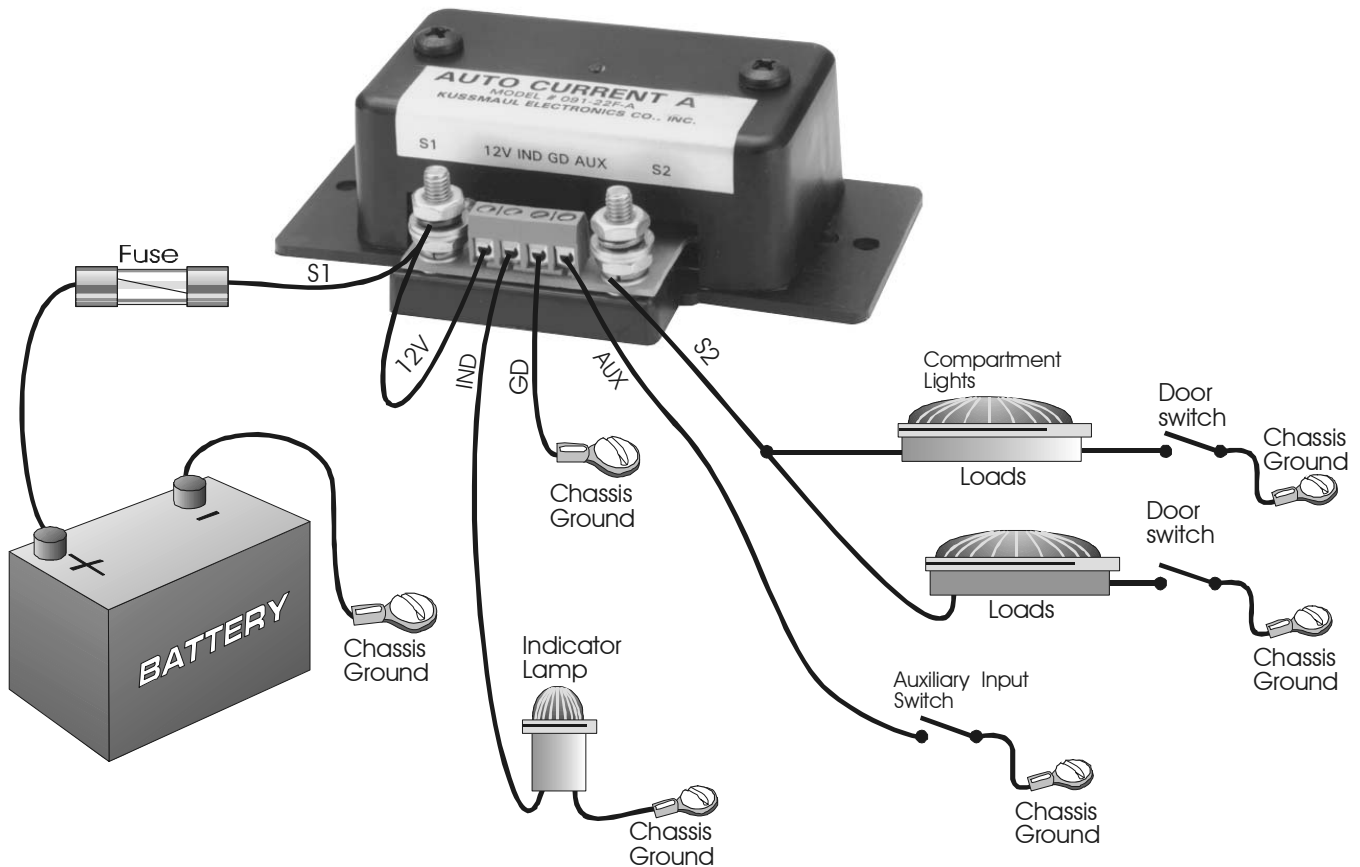

The Auto Current A detects current and closes a switch when the sensed current flows, to provide a remote indication. The current detected may be from compartment lights as illustrated or from any other D.C. Load in the range.

An Auxiliary input permits operating the output relay from other grounding switches. Any number of switches may be connected in parallel to terminal 4 to operate the Indicator Lamp.

Warning Indicator is limited to 5 amperes maximum.

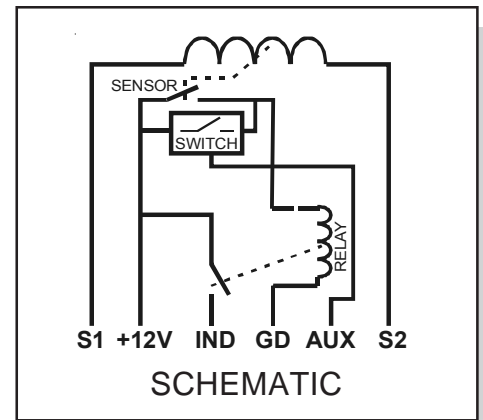

ORDERING INFORMATION

MODEL NUMBER	RESIST OHMS	MIN. OPER. AMPS	MAX. OPER. AMPS	SWITCH RATING, 12V
091-22-A	0.01	1	30	5 AMP.
091-22-A-6	2	0.1	4	5 AMP.



KUSSMAUL ELECTRONICS CO., INC.
170 CHERRY AVE., WEST SAYVILLE, N.Y. 11796

TEL: in NY 631-567-0314

TOLL FREE: 800-346-0857

FAX: 631-567-5826