COIL-LOK P/N 1021


INSTALLATION INSTRUCTIONS

For additional assistance call 888-514-0083 between 8AM-5PM EST or email: info@pactoolmounts.com

CAUTION

To avoid the risk of personal injury, property damage or product damage, please use the included fasteners for mounting.

- * The bracket must be securely mounted to a stable surface and material.
- * When mounting bracket to PAC TRAC aluminum products P/N 7000, P/N 7020, P/N 7040, P/N 7050 with the included Trac Lok inserts P/N 7016, torque the screws to a maximum 15 in-lbs.
- * PAC recommends regular and frequent inspections to be certain of proper operation and installation.

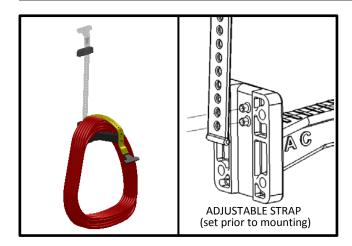

STANDARD MTG. HARDWARE PAC Fastener Packet P/N 1021-9402 includes:			QTY
	P/N 3017	1/4-20 x 1 S.S. Pan Head Screw	6
	P/N 2069LN	1/4-20 Nylon Locking Nut	6
		TG. HARDWARE et P/N 1021-9401 includes:	QTY
	tener Pack		QTY 6

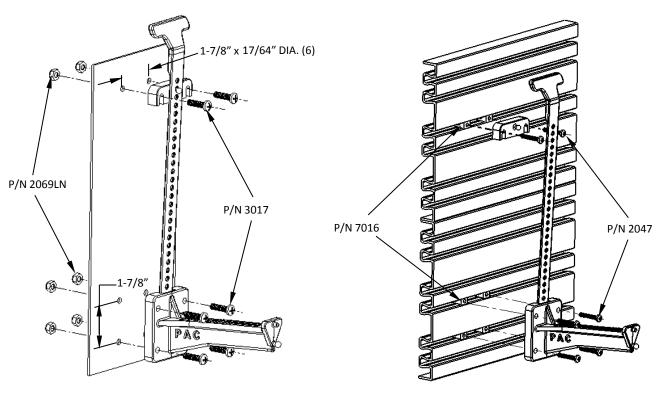


FIGURE 1 (Standard Thru Mounting Method)

FIGURE 2
(Pac Trac Mounting Method)