



1) Put on your PPE

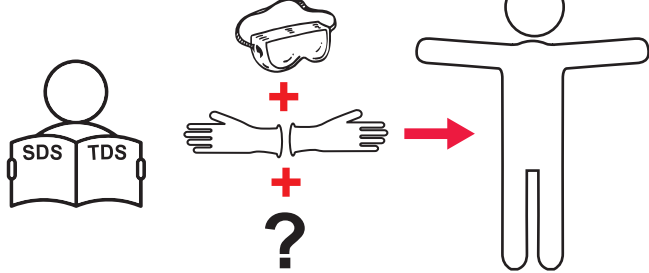


2) Fill the reservoir

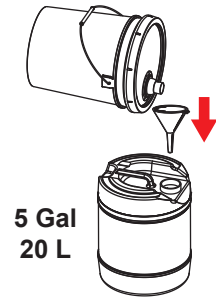


3) Attach metering head



4) Set the controls

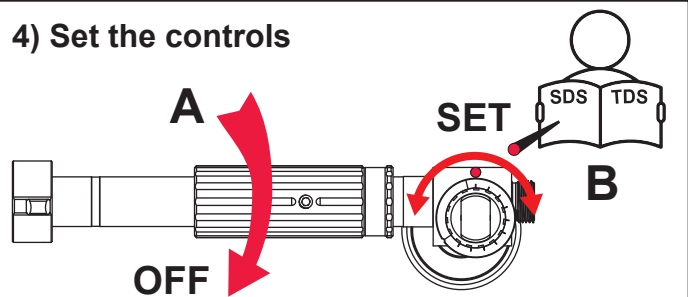

5) Connect hoses and nozzle

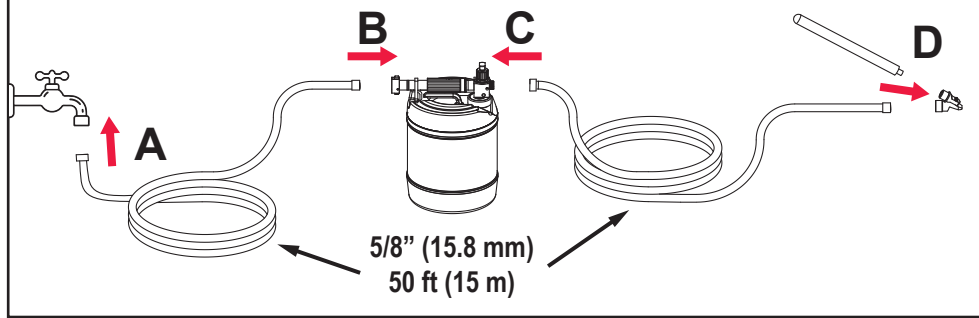

6) Spray

