


Electronic Touch Control Panel:

Both units feature a simple to use touch-sensitive electronic control panel, which is located above the door. The control panel displays and controls temperature and run times. There are a total of five factory pre-set temperatures which can be selected. The control panel also displays the run time remaining when the unit is in operation.

Time Settings: A simple touch of the HOUR and MIN time setting pads on the control panel allows users to select the run time, in 15 minute intervals, with a maximum run time setting of 10 hours

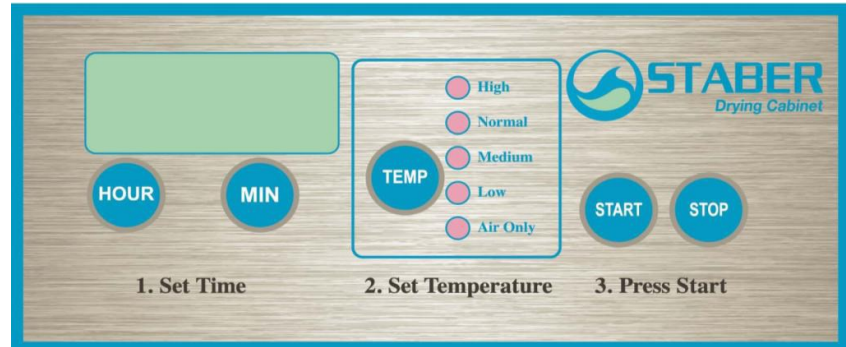

Temperature Settings: A simple touch of the TEMP pad on the control panel allows a total of five preset drying temperature settings, with associated LED light indicators. The five different drying temperatures are: **Air Only** (No Heat), Low (**105F**), Medium (**120F**), Normal (**135F**) & High (**150F**).

Revealing Temperature on LCD Display:

Drying cabinet Must BE turned off.

Step 1: press logo button

Step 2: press the hour button until display reaches 4 0F.

Ventilation: ventilation is at the users discretion but the drying cabinet has a 4" opening in the top, centered and 5" inboard of the left side-wall to accept 4" ducting if desired by the user.

